






INSTRUCTIONS

FOR USE WITH JOHNSON
1500HD, 1500SC, 2000 SERIES
POCKET DOOR FRAMES ONLY

www.johnsonhardware.com

1574 POCKET DOOR FRAME ADAPTER KIT FOR 4" (100mm) STEEL STUD WALLS

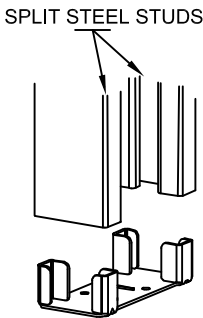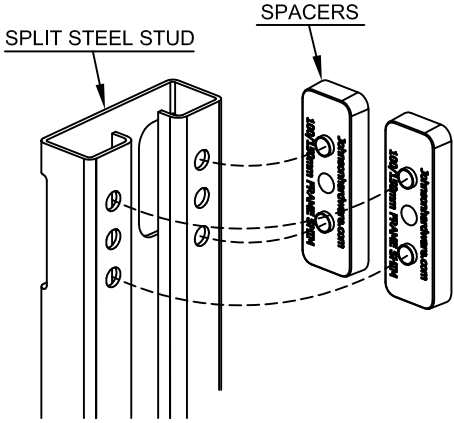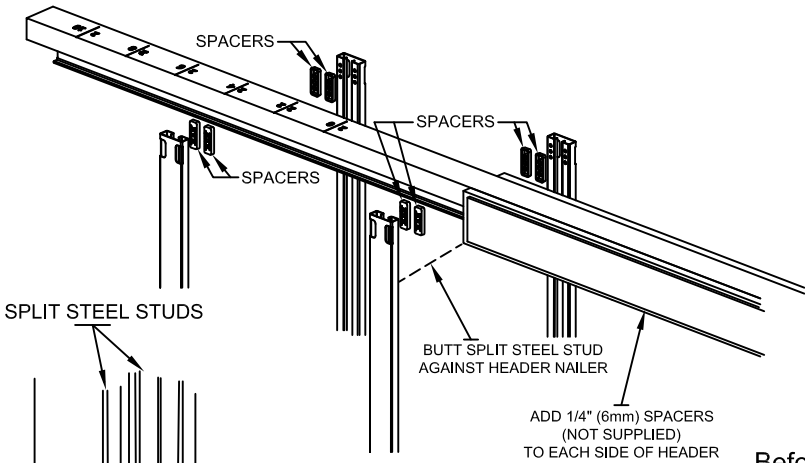

Discard standard Floor Brackets and replace with 4" (100mm) Floor Brackets.

Before assembling Split Steel Studs to header, snap nylon spacer pads onto top end of each stud. (Small sleeves fit into Split Stud screw holes). Screw studs into place as instructed in 1500HD, 1500SC or 2000 assembly instructions.