

161 Pocket Door Lock Set

Installation Instructions

1-3/8" [35mm] or 1-3/4" [44mm] Door Thickness Only

1. Prepare door per template


Template location <https://jhusa.net/architectural-pocket-door-locks>



2. Install 240 Pocket Door Lock and Flush Pull.

1-3/8" [35mm] door installations require the lock spindle to be shortened. 1-3/4" [44mm] door installations DO NOT require spindle shortning .

To shorten the lock spindle twist and break off the spindle of emergency release escutcheon at the notch (towards the end of the spindle).

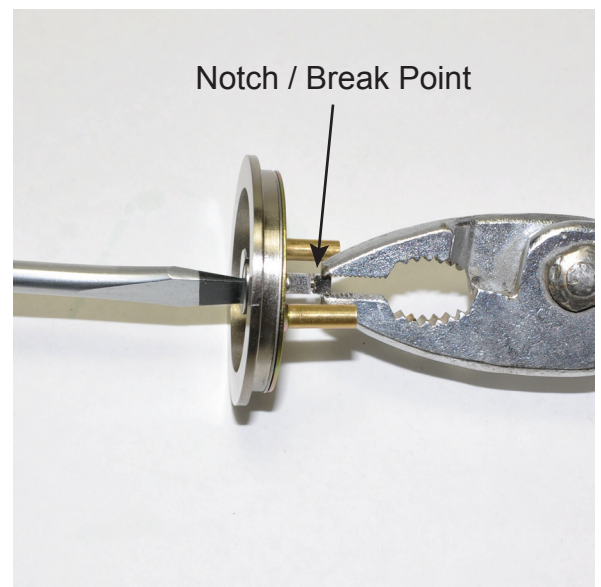

Fasten 240 Pocket Door Lock tube latch and strike using the (4) #8 screws provided.



Surface mount rectangular escutcheons using the (8) #6 screws provided

3. Install Edge Pull (typically installed below lockset) using (2) #8 screws provided.

Call Accurate Lock directly at 203-348-8865 for technical or installation assistance.

