




www.johnsonhardware.com

# INSTRUCTIONS

FOR USE WITH JOHNSON  
1500 SERIES POCKET DOOR  
FRAMES ONLY

## 1575 PPK3 POCKET DOOR FRAME ADAPTER KIT FOR 1-3/4" THICK DOORS

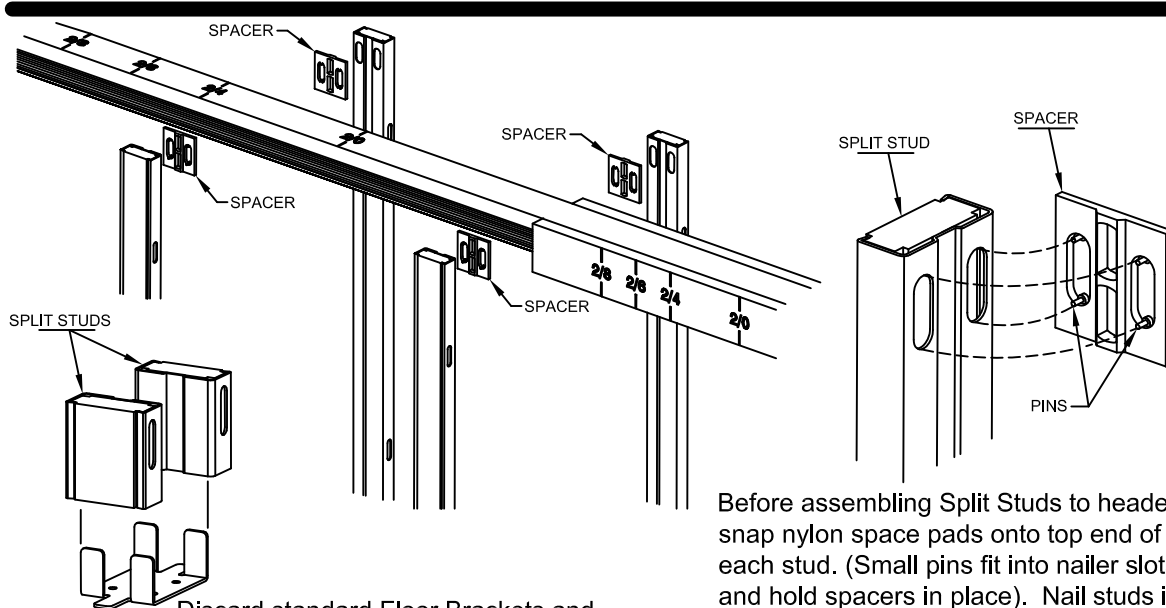

Discard standard Floor Brackets and replace with 1-3/4" (44mm) Floor Brackets.

Before assembling Split Studs to header, snap nylon space pads onto top end of each stud. (Small pins fit into nailer slots and hold spacers in place). Nail studs into place as instructed in 1500 assembly instructions.